

Trainertec PTS-1200 Remote Dog Training Collar with Auto Anti Barking

Thank you for choosing PTS1200 Remote dog training collar. Our mission is to offer the best electronic training solutions. We want to ensure your dog's safety by providing you with the tools and techniques to successfully train your pet.


Main Features

- * - Range in open field up to 1200 meters.
- * -Anti bark function
- * -Train up to 3 dogs from the same transmitter.
- * -Highlight LED functionallows you to find pet from 200-300 meters away at night
- * - 10 levels each of static shock.
- * - 10 levels of vibration
- * - "Beep" sound activated with a separate button
- * - Two buttons "+" and "-" allow you to set your intensity
- * - LCD digital display for 10 shock & vibration levels & dog ID
- * - Memorize shock level in transmitter for different dogs.
- * - Easy to operate with rubber button.
- * - Waterproof transmitter and receiver. Dogs can swim freely.
- * - Rechargeable 3.7V Li-ion battery for transmitter and receiver.
- * -Strong TPU Collar Strap.
- * - LED low power indication, red light will flash when battery level is low.
- * - Full functional multi-dog training system.
- * - Around 8 seconds safe static shock protection.

Specification

SPECIAL FEATURES	Designed for high-drive, more stubborn dogs.hunting dog
RANGE	Up to 1300 yards (1200m)
STIMULATION RANGES	10 levels of static stimulation(8 seconds safe static shock protection) Option to train with vibration and tone
EXPANDABLE SYSTEM	3 dogs training with 1 Remote Transmitter
ANTI BARKING MODE	Turn on /off Anti Bark Mode= Press for 2 seconds + Flashing Red Led Light once
WATERPROOF	Transmitter: IP6 ; Receiver: IP7 ,dog can swim freely
HIGHLIGHT LED FUNCTION	Find pet from 200-300 meters away at night
DOG SIZE	Don't use the collar on a dog that is under 10 pounds or months of old 75cm Adjustable TPU strap
BATTERIES	Rechargeable lithium-ion batteries for Transmitter and Receiver
LOW BATTERY INDICATOR	YES
PRODUCT DIMENSIONS	Receiver without strap - 8 X 4.1 X 5cm Remote Transmitter - 13.45 X 5.5 X 2.9cm
WARRANTY	2 YERS


Details Images

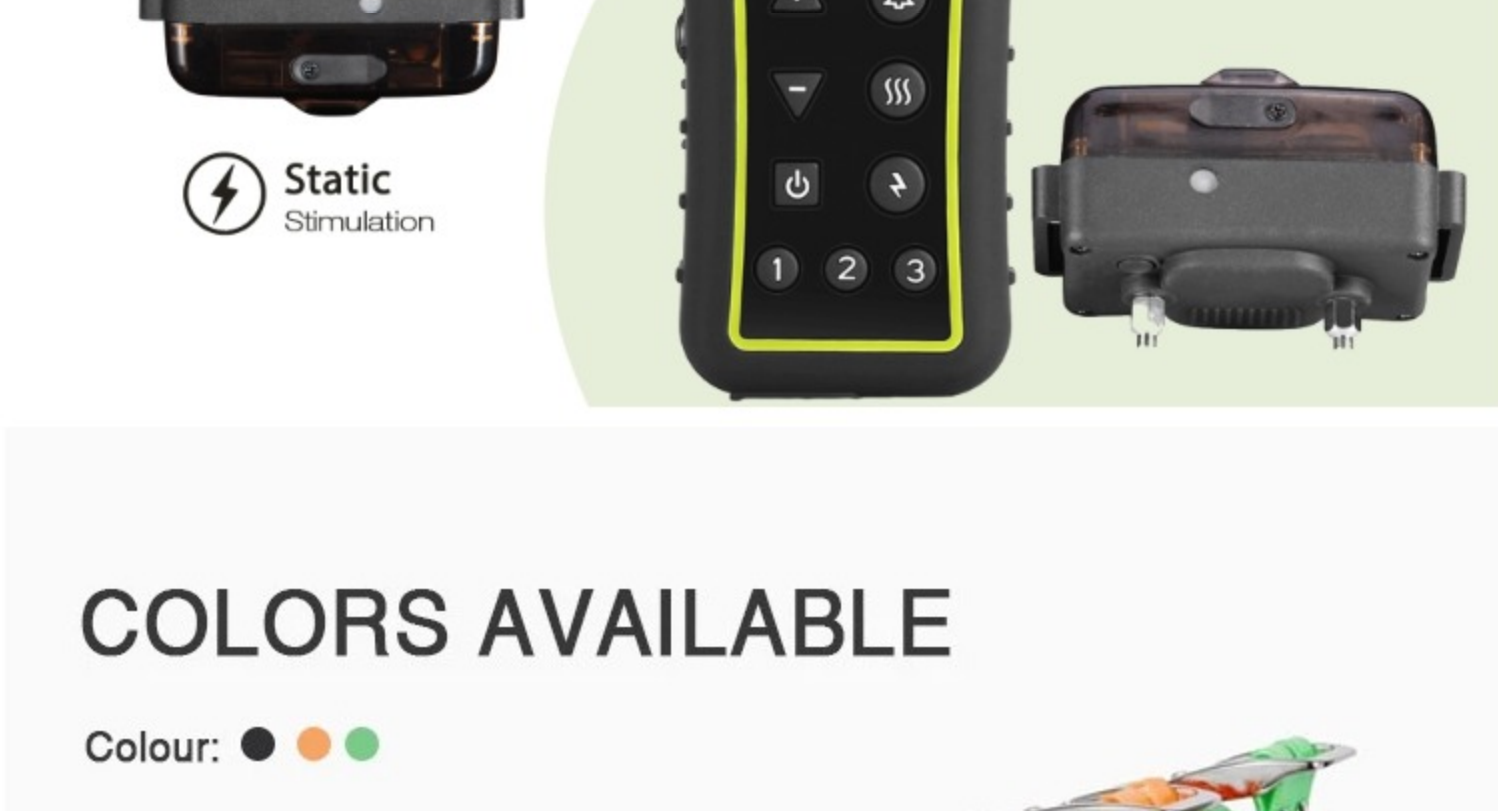

COLORS AVAILABLE



2 HOURS QUICK CHARGING

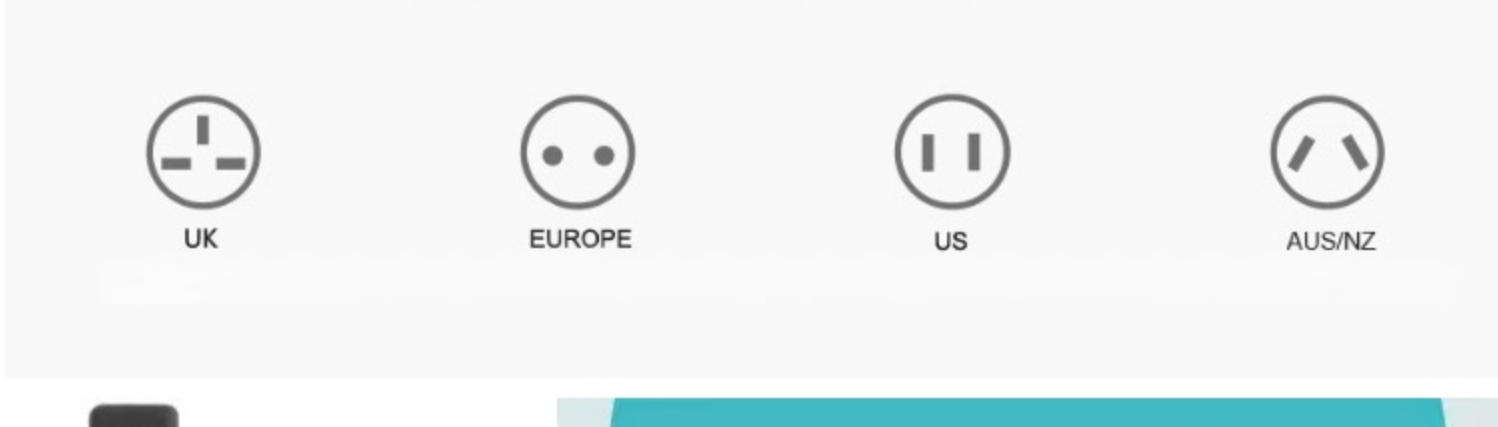

Universal Plug

Working worldwide: United States, Canada, Europe, Middle East, South America, Asia, The Caribbean, UK, Ireland, Africa, Hong Kong, Singapore, Australia, Fiji, New Zealand, China, Japan, and more than 150 countries.



 
Train up to 3 dogs from the same transmitter



Waterproof Design



Highlight LED function, the pet can be find from 200-300 meter away in dark night

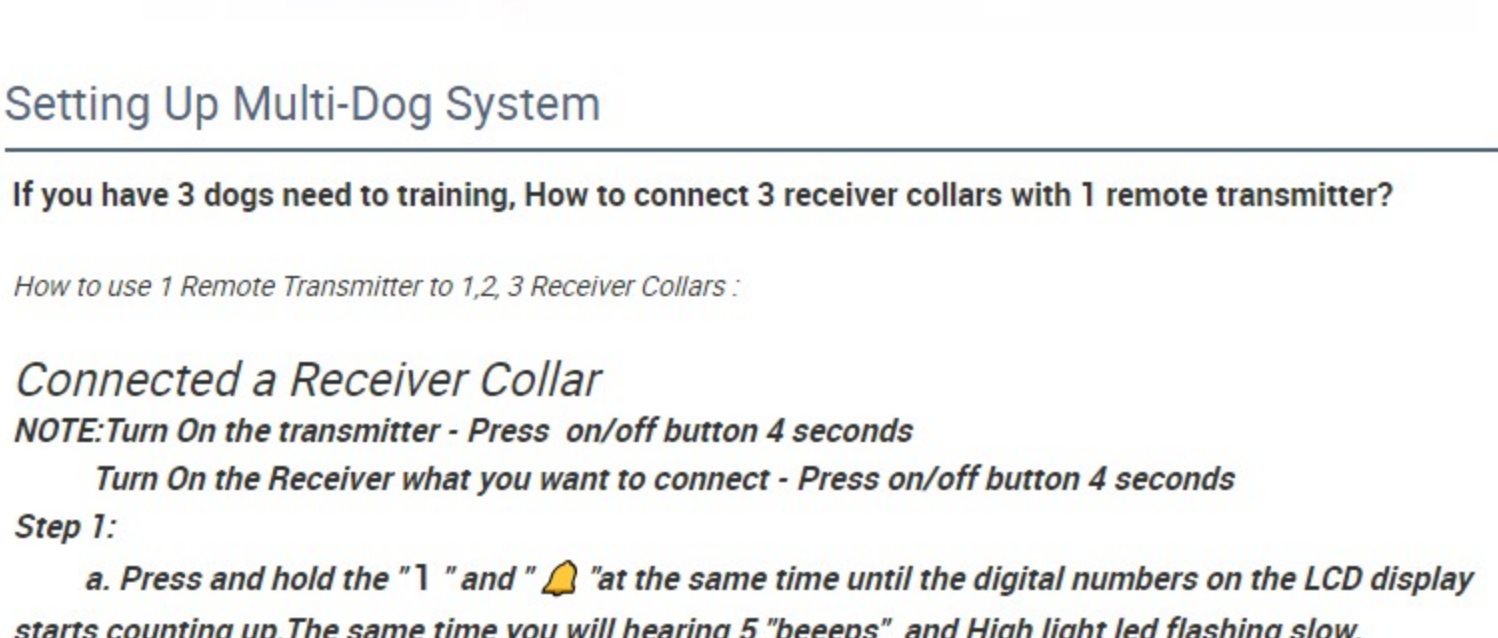

Setting Up Multi-Dog System

If you have 3 dogs need to training, How to connect 3 receiver collars with 1 remote transmitter?

How to use 1 Remote Transmitter to 1,2,3 Receiver Collars :

Connected a Receiver Collar


NOTE:Turn On the transmitter - Press on/off button 4 seconds
Turn On the Receiver what you want to connect - Press on/off button 4 seconds

Step 1:

a. Press and hold the "1" and "Bell" at the same time until the digital numbers on the LCD display starts counting up,The same time you will hearing 5 "beeps" and High light led flashing slow.

1=A=White
2=B=Red
3=C=Green

b. Release the button, then connected finished. You can use the remote training collar

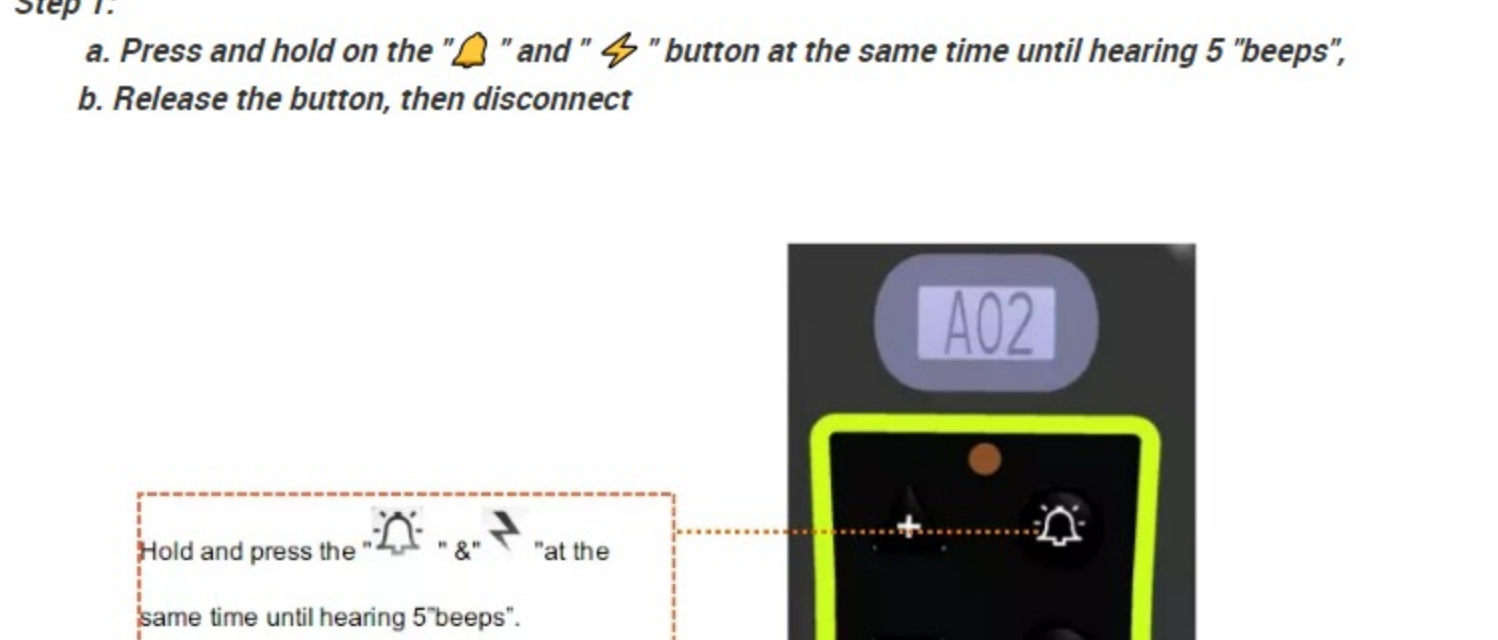


Disconnect a Receiver Collar

NOTE:Turn On the transmitter - Press on/off button for 4 seconds
Turn On the Receiver what you want to connect - Press on/off button for 4 seconds

Step 1:

a. Press and hold on the "Bell" and "Lightning" button at the same time until hearing 5 "beeps",

 b. Release the button, then disconnect

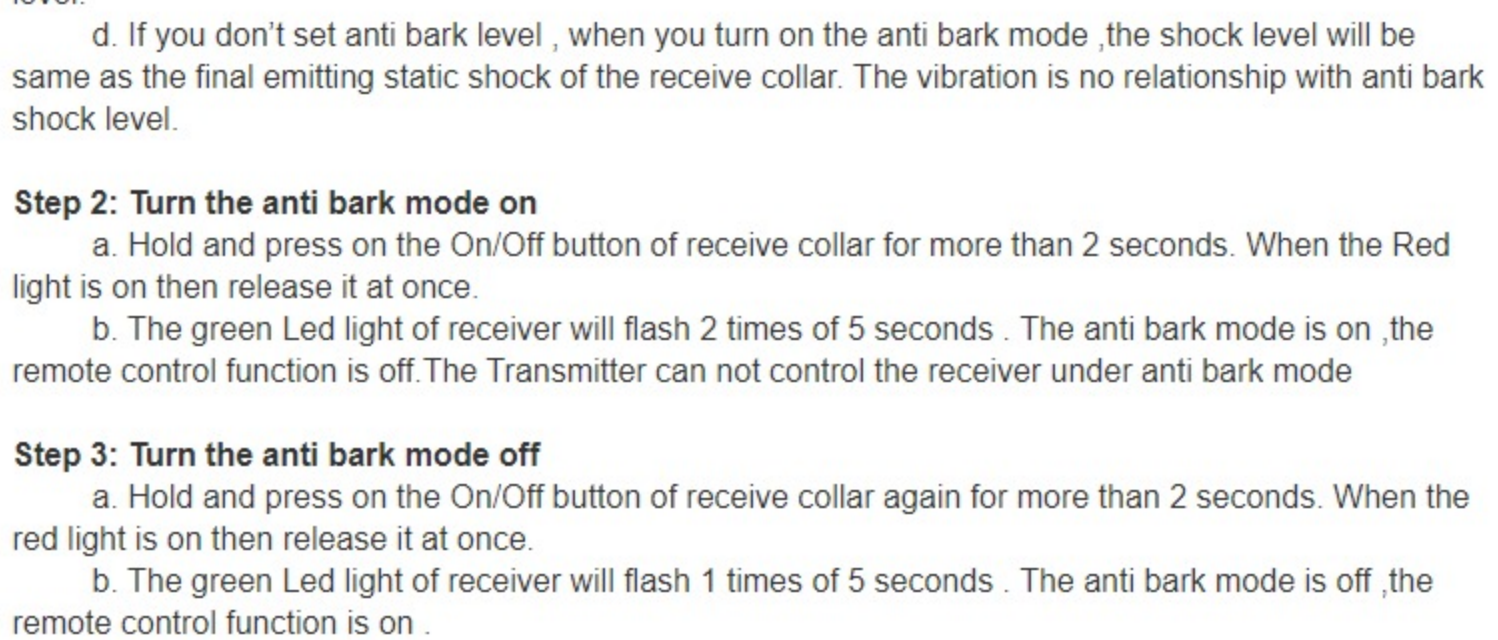

Anti Bark Operation

Your remote trainer has anti bark function. Please follow the below steps to turn on the Anti bark mode.

Step 1: Choose proper shock level for anti bark

a. Press the "+" or "-" buttons to select suitable shock level.

b. Then press "Lightning" button and confirm the receive collar receive the signal from Transmitter and emit at least one shock. The receive collar will keep this shock level for anti bark when you turn on the anti bark mode at once

c. If you want to change the anti bark shock level. Please repeat above 1) and 2) to set new shock level.

d. If you don't set anti bark level, when you turn on the anti bark mode, the shock level will be same as the final emitting static shock of the receive collar. The vibration is no relationship with anti bark shock level.

Step 2: Turn the anti bark mode on

a. Hold and press on the On/Off button of receive collar for more than 2 seconds. When the Red light is on then release it at once.

b. The Green Led light of receiver will flash 2 times of 5 seconds. The anti bark mode is on, the remote control function is off.The Transmitter can not control the receiver under anti bark mode

Step 3: Turn the anti bark mode off

a. Hold and press on the On/Off button of receive collar again for more than 2 seconds. When the red light is on then release it at once.

b. The green Led light of receiver will flash 1 times of 5 seconds. The anti bark mode is off, the remote control function is on.

Product packaging



CONTENTS
1*Transmitter
1*Receive Collar
1*5V 1000mA DC Adaptor(AU/UK/US OPTION)
1*75CM Adjustable TPU Strap
1*Test Lighter
2*Manual
2*Long Prongs
2*Short Prongs
1*Spanner for changing prong

BOX SIZE
21.5X14.5X4.8CM

WEIGHT:
0.6KG/PCS

QTY/CTN SIZE
46X31X26(20PCS)

Company Profile

Our profession

Help you solve any technical problems

OUR FACTORY

MODULE TEST

Exhibition

Attend Global Professional Pet Expo Every Year

CPS in Shanghai SUPERZOO in Las Vegas(USA) Global Pet Expo in Orlando(USA)

